

PU1028

Initializing Rutoken authentication dongle

Please note that all the contents of Rutoken device will be permanently erased during the initialization.

All the contents of Rutoken ECP 2.0 Flash data card will be erased during the initialization if user PIN has been blocked before.

Rutoken Disk software will be completely disabled after the initialization.


To restore Rutoken Disk software after the initialization please follow the [manual](#).

*It's impossible to reinitialize blocked Rutoken device of earlier versions (marked as **OB0Z** or **OD3Z** on the device enclosure), you need to purchase a new one.*

Please follow the [manual](#) to install or update Rutoken drivers.


Click **Rutoken Control Panel** icon on Windows desktop or type **Rutoken Control Panel** in Windows search panel to start it.

When **Rutoken Control Panel** is opened select **Administration** tab. Then click the **Login** button in upper right corner.

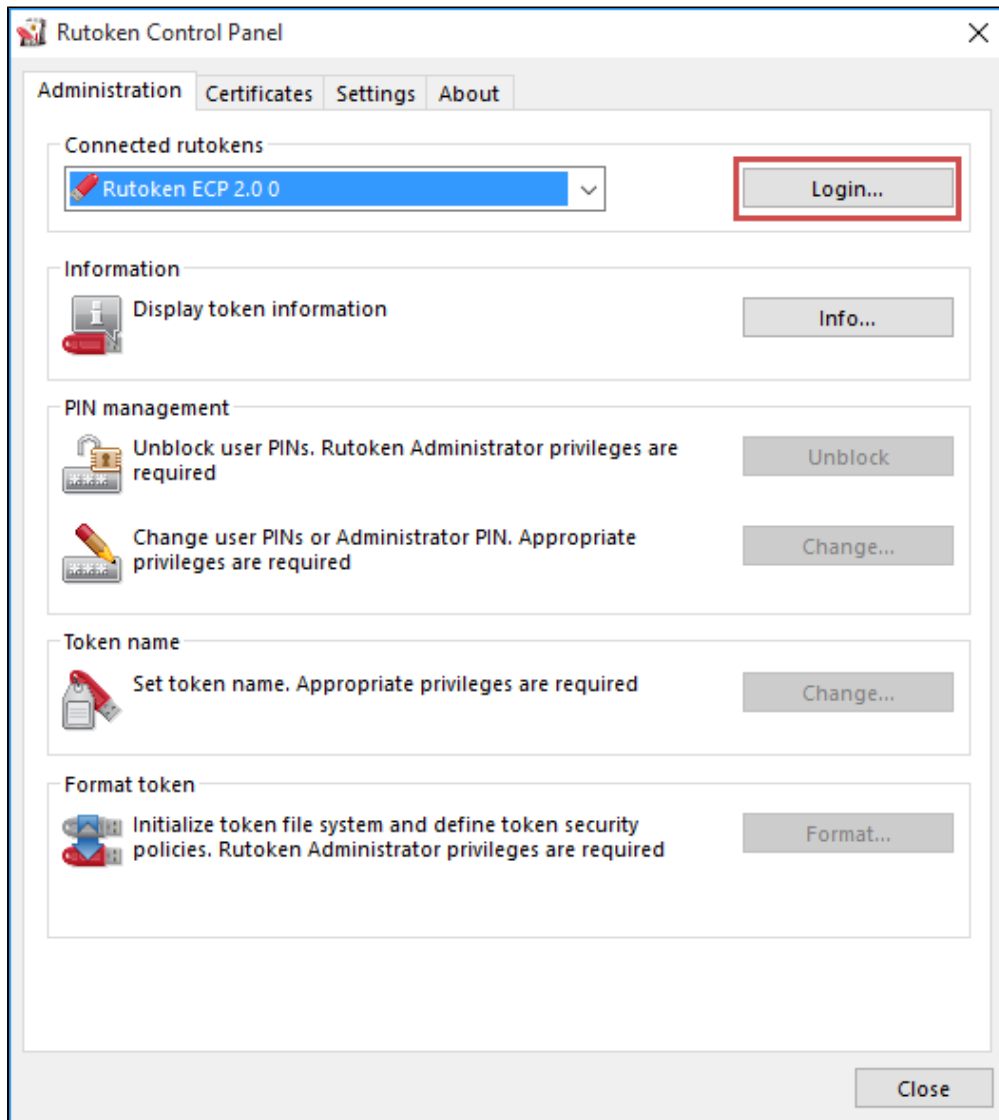


logon dialog choose the proper Rutoken device by selecting it in the dropdown box and tap **Administrator** radio button. Then enter Admin PIN and press **OK**.

The default Admin PIN is **87654321**.

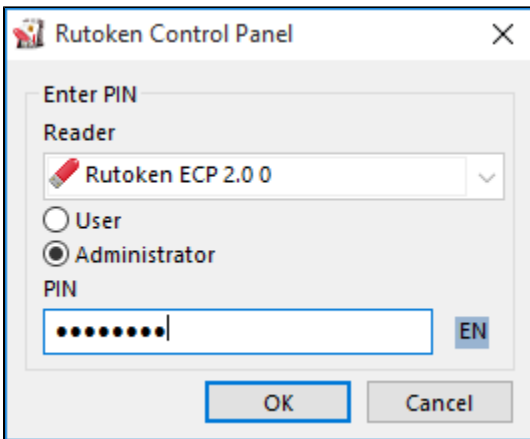


If Admin PIN is lost, you need to block Rutoken device by entering invalid PIN value so many times as required. The invalid PIN length should be greater than 6.

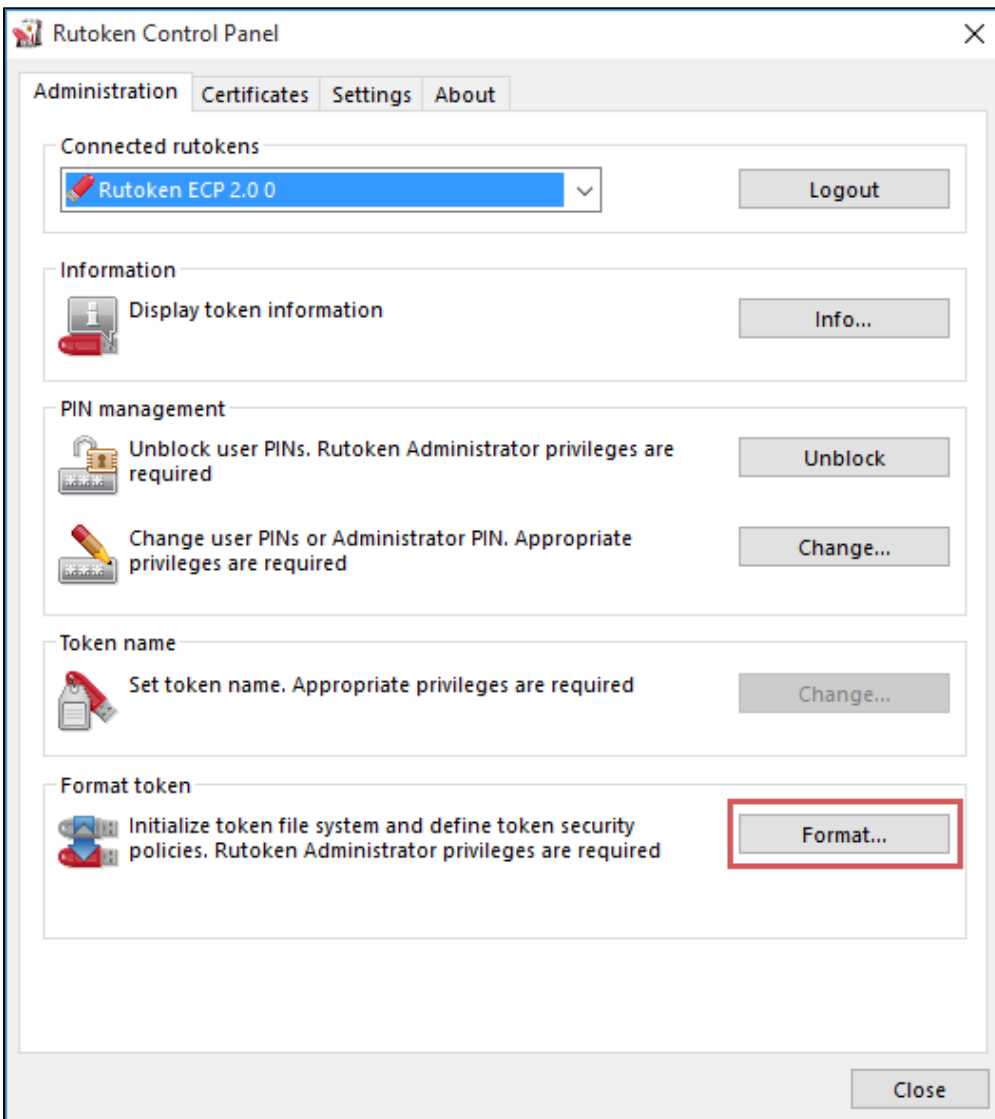

After **Format...** button is enabled click it to open **Format token** dialog box.


In this dialog you may set the new values of token name, User and Admin PIN's and permit the account keepers to change user PIN.

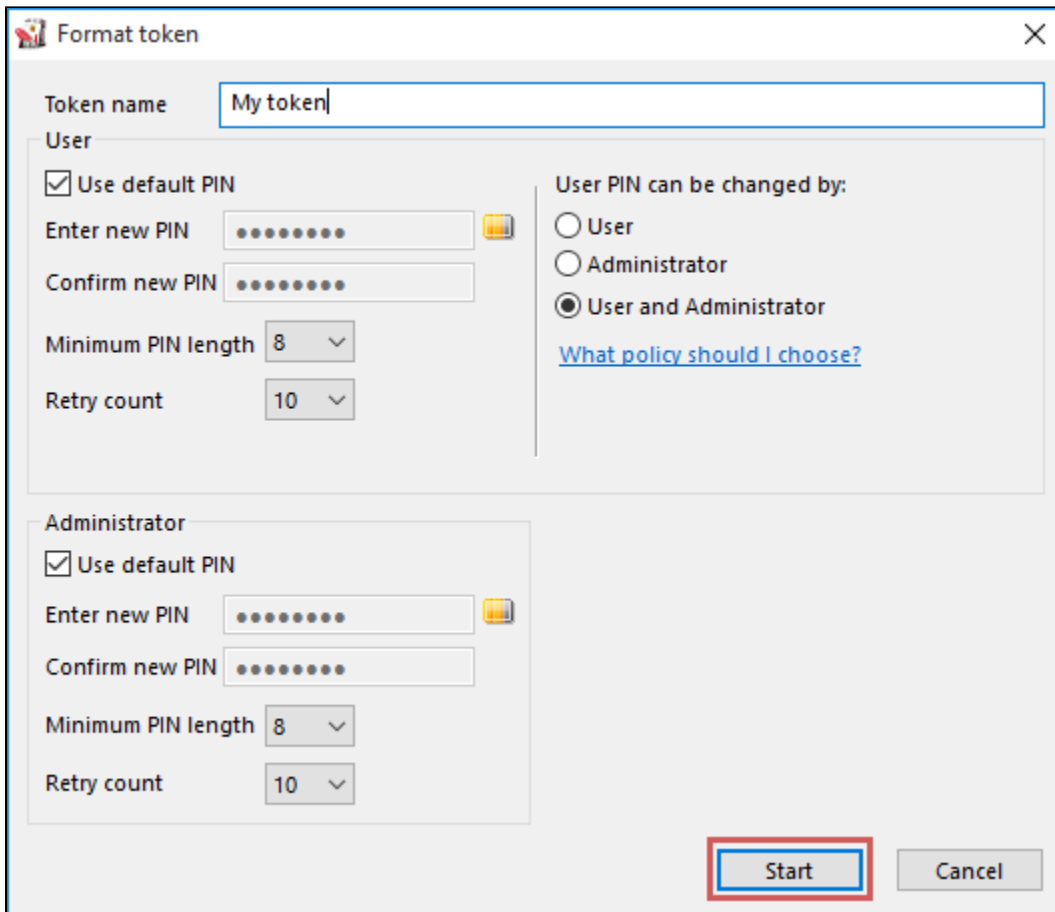

The image shows a Windows dialog box titled "Format token". At the top, there is a text field for "Token name" containing "My token". Below this, there are two sections: "User" and "Administrator". Each section has a checked "Use default PIN" checkbox, followed by "Enter new PIN" and "Confirm new PIN" text boxes with masked characters, and dropdown menus for "Minimum PIN length" (set to 8) and "Retry count" (set to 10). To the right of the "User" section, there is a heading "User PIN can be changed by:" with three radio button options: "User", "Administrator", and "User and Administrator" (which is selected). A blue hyperlink "What policy should I choose?" is located below these options. At the bottom right of the dialog, there are two buttons: "Start" (highlighted with a red rectangle) and "Cancel".

Now click the **Start button** to process the initialization of Rutoken device. Click **Yes** to skip the warning dialog on **No** to prevent the operation.

Do not disconnect the Rutoken device or turn off the computer before the initialization is complete.

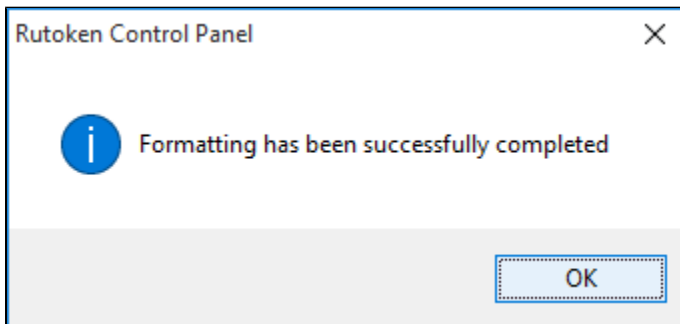

The image shows a Windows dialog box titled "Rutoken Control Panel". It features a blue information icon on the left and the text "Formatting has been successfully completed" in the center. At the bottom right, there is an "OK" button.